ORDER NO. MD0502024C3

Service Manual

Speaker System

SB-AK230GT

Colour

(S)... Silver Type

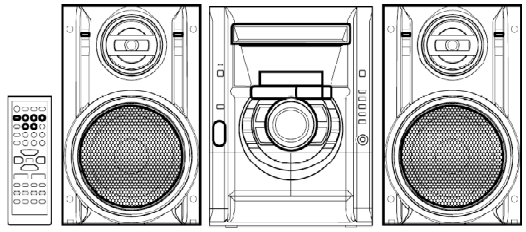

SPECIFICATIONS

Specification

Type	**2 way, 2 speaker system (Bass reflex)**
Speaker(s)	
Woofer	**16 cm cone type**
Tweeter	**6 cm cone type**
Impedance	**5 Ω**
Input power (IEC)	**100 W (Max)**
Output sound pressure level	**81 dB/W (1.0 m)**
Cross over frequency	**4 kHz**
Frequency range	**35 Hz - 28 kHz (-16 dB)**
	50 Hz - 26 kHz (-10 dB)
Dimensions (W x H x D)	**220 x 330 x 201 mm**
Mass	**2.7 kg**

Notes :

1. Specifications are subject to change without notice.

2. Mass and dimensions are approximate.

■ **System : SC-AK230GT -S**

Music Center : SA-AK230GT-S

Front Speaker : SB-AK230GT-S

PDF created with pdfFactory Pro trial version www.pdffactory.com

© 2005 Matsushita Electric Industrial Co. Ltd.. All rights reserved.
Unauthorized copying and distribution is a violation of law.

This
It doe
Prod
or re

1. Connection of the Speaker Cables

- Be sure to connect speaker cables before connecting the AC power supply cord.
- The load impedance of any speaker used with this unit must be 5 Ω .
- Be sure to connect the cable from the right speaker to the right terminal and the cable from the left speaker to the left terminal.

1. Strip off the outer covering, and twist the center conductor. Make sure the bare ends of the wires are not unravelled. (If they are, twist them tight again.)
2. Insert the wire to the rear panel of the unit and close the lever.

Notes :

- To prevent damage to circuitry, never short-circuit positive (+) and negative (-) speaker wires.
- Be sure to connect only positive (red) wires to positive (+) terminals and negative (black) wires to negative (-) terminals.

Placement

Speakers are designed identically so that no left or right channel orientation is necessary.

Notes :

- Keep your speakers at least 10 mm away from the system for

PDF created with pdfFactory Pro trial version www.pdffactory.com

proper ventilation.

- These speakers do not have magnetic shielding. Do not place them near televisions, personal computers or other devices easily influenced by magnetism.

- You cannot take the front net off the speakers.

Connection

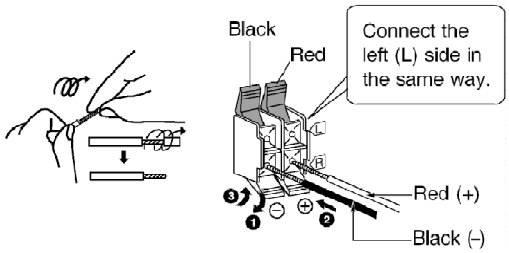

Use only the supplied speakers.

The combination of the main unit and speakers provide the best sound.

Using other speakers can damage the unit and sound quality will be negatively affected.

Notes on speaker use

- You can damage your speakers and shorten their useful life if you play sound at high levels over extended periods.

- Reduce the volume in the following cases to avoid damage.

- When playing distorted sound.

- When adjusting the sound quality.

Caution
- **Use the speakers only with the recommended system. Failure to do so may lead to damage to the amplifier and/or the speakers, and may result in the risk of fire. Consult a qualified service person if damage has occurred or if you experience a sudden change in performance.**
- **Do not attach these speakers to walls or ceilings.**

2. Connection of the Speaker Wiring

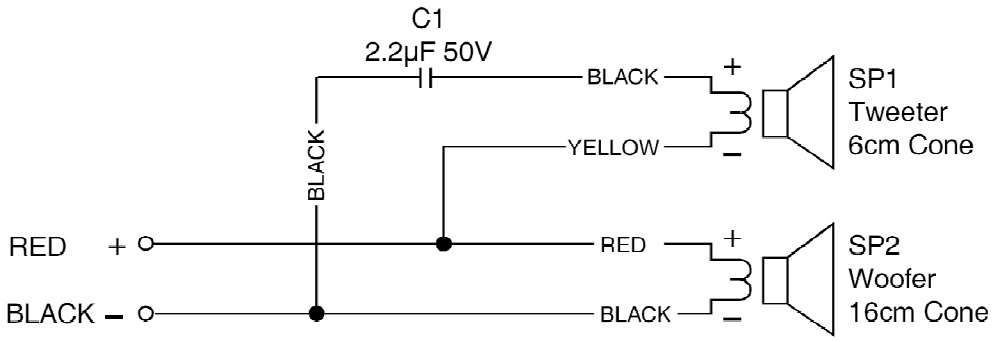

3. Cabinet Parts Location

PDF created with pdfFactory Pro trial version www.pdffactory.com

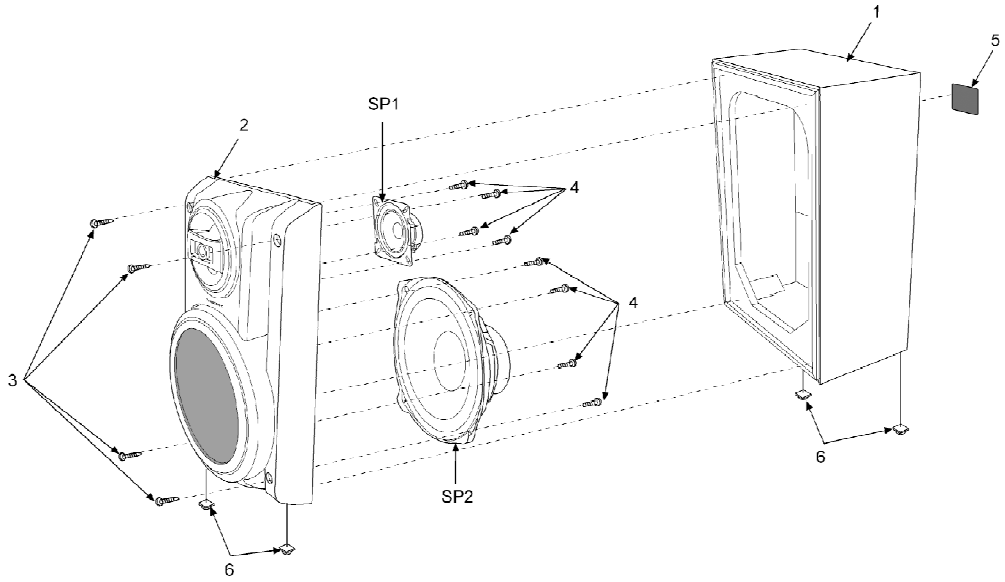

4. Replacement Parts List

Notes :

- Important safety notice :

When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list.

- [M] markings in the Remarks columns indicates parts supplied by PAVCSG.

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
1	RYKX0297-S	SPK CABINET ASS'Y	[M]
2	RYBX0074-S	FRONT PANEL ASS'Y	[M]
3	XTB4+16AFZ	SCREW	[M]
4	XTB4+10JFJ	SCREW	[M]
5	RGNX0264A-K	SPEC SHEET	[M]
6	RKA0072-KJ	LEG CUSHION	[M]
		CAPACITOR	
C1	ECEA1HAY2R2	2.2uf 50V	[M]
		PACKING MATERIALS	
P1	RPNX0286	POLYFOAM SET	[M]
P2	RPFX0108-2	MIRAMAT BAG	[M]
		SPEAKERS	
SP1	EAST6PH08A6	TWEETER	[M]
SP2	EAST16PL41F6	WOOFER	[M]

PDF created with pdfFactory Pro trial version www.pdffactory.com

5. Packaging

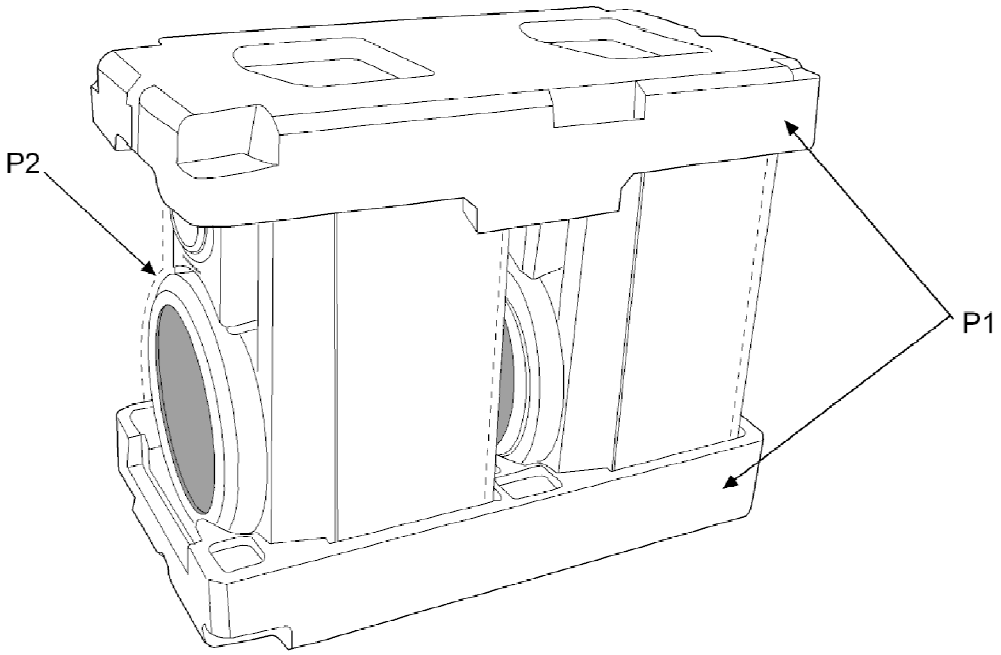

FLE0502W/S

PDF created with pdfFactory Pro trial version www.pdffactory.com